

MAITRE
DÉCÓ

PIERRE ROMAINE


АКРИЛОВАЯ ФАКТУРНАЯ
ШТУКАТУРКА С ЭФФЕКТОМ
ТРАВЕРТИН

PIERRE ROMAINE


ВДОХНОВЕНИЕ СОВЕРШЕНСТВОМ

PIERRE ROMAINE

ЛМ 82891091

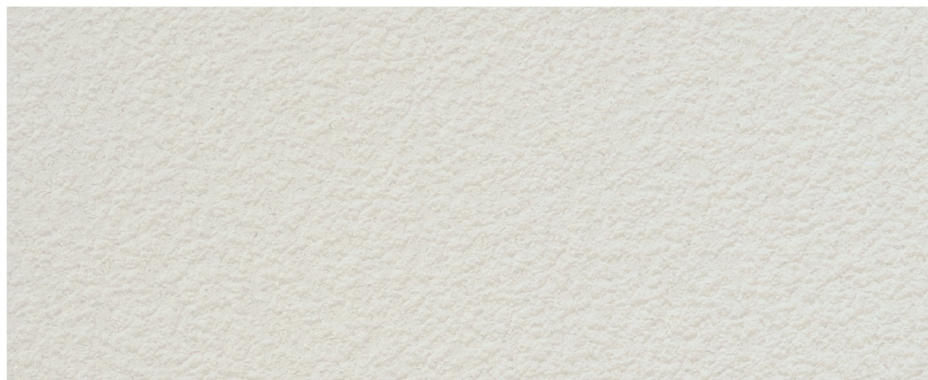

PR 916

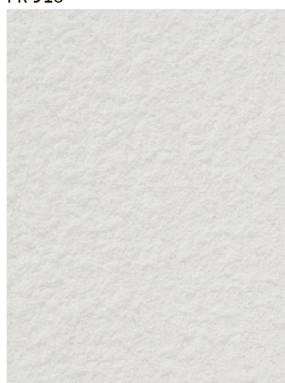

PR 900 БА3А



PR 911



PR 902



PR 915



PR 913




PR 907

PIERRE ROMAINE

PIERRE ROMAINE

MAITRE
DECÓ

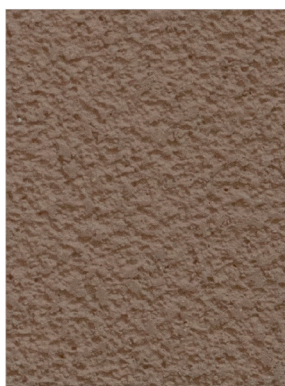

PR 905



PR 910



PR 914



PR 918

PIERRE ROMAINE

PIERRE ROMAINE




PR 920



PR 921



PR 922

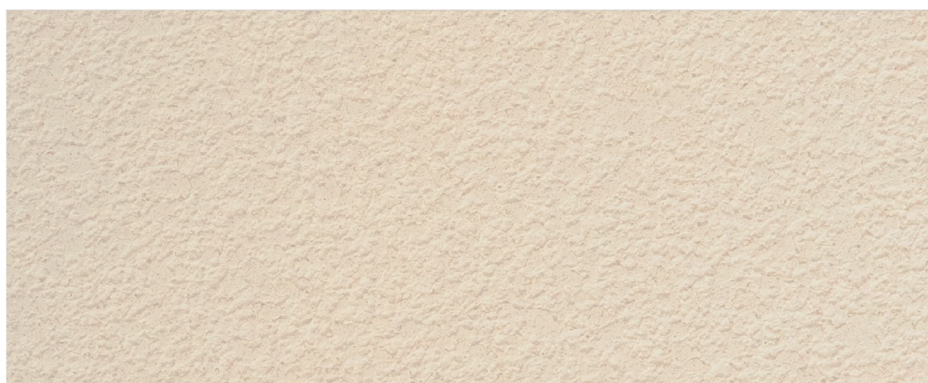

PR 923



PR 924



PR 925



PR 926

PIERRE ROMAINE

PIERRE ROMAINE

MAITRE
DECÓ



PR 927



PR 928



PR 929




PR 930



PR 931

PIERRE ROMAINE

PIERRE ROMAINE

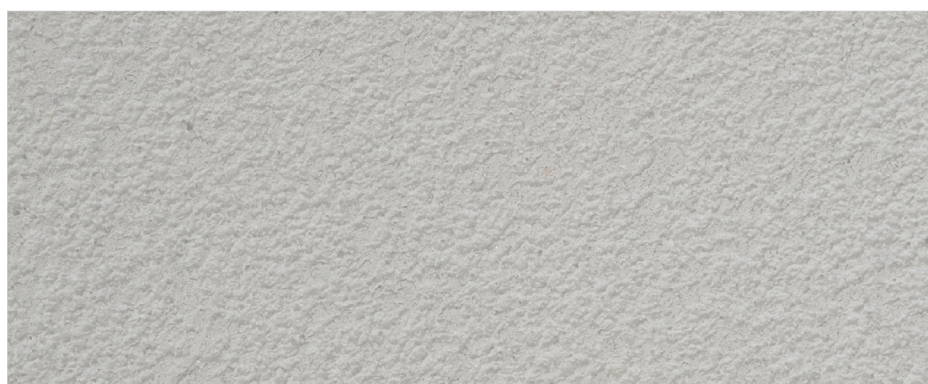

PR 917 + GEL PAILLETÉ Incolore

НАНЕСЕНИЕ PIERRE ROMAINE

Шаг 1.

Нанесите валиком или кистью 1 подготовительный слой грунта BASE QUARTZ.

ЛМ 82891643 — 1,5 кг

ЛМ 82891644 — 14 кг

Шаг 2.

Нанесите два слоя PIERRE ROMAINE кельмой. Не дожидаясь высыхания второго слоя, создайте рисунок валиком, затем пригладьте.

Шаг 3.

Покройте защитным лаком GEL PAILLETÉ, используя валик.

ИНСТРУМЕНТЫ: валик, кисть, кельма

